





We Drain Your Site, Not Your Budget!

MULTIDRAIN SYSTEMS, INC.
P.O. BOX 88
BARIUM SPRINGS, NC 28010
TOLL FREE: 1-800-433-1119
PHONE: (704) 508-1010
FAX: (704) 508-1011
www.multidrain.com

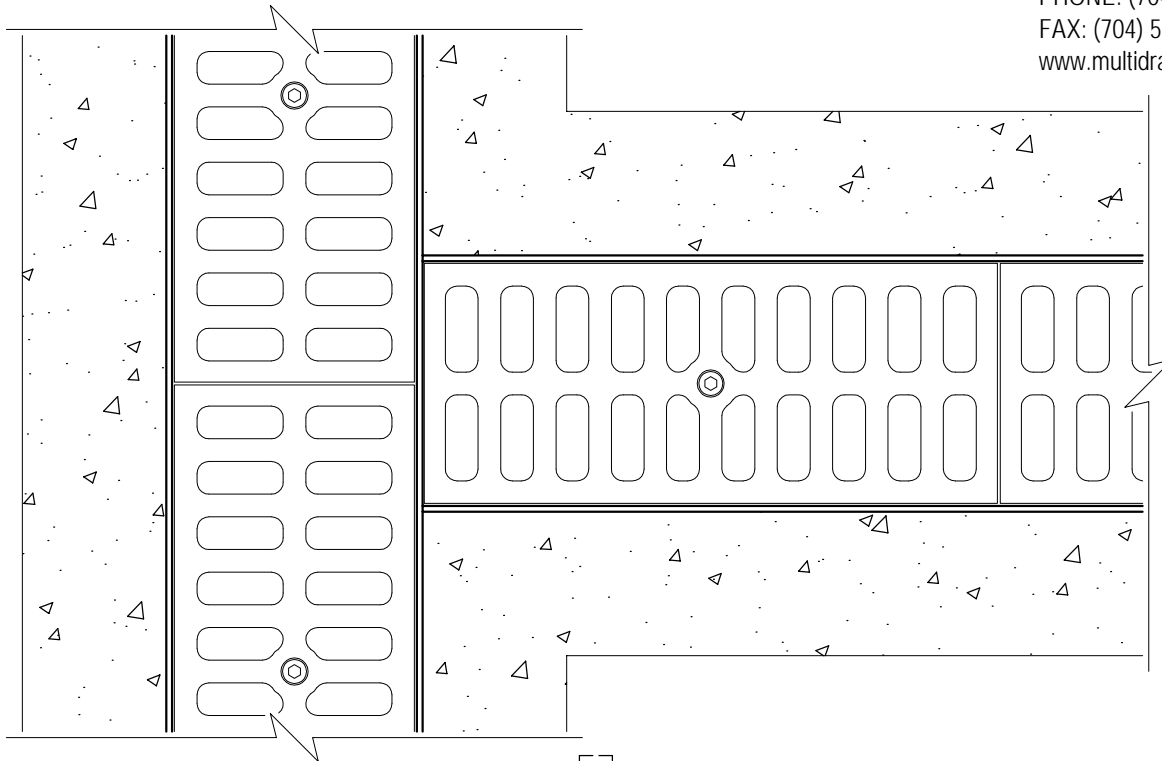

FINISHED PLAN VIEW
DO NOT SCALE

STEP 1: REMOVE ANCHOR STAND OR STUD IF NECESSARY.

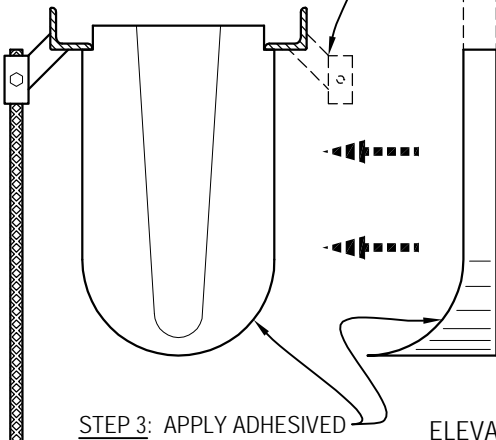


STEP 3: APPLY ADHESIVED TO MATING SURFACES.

ELEVATION
DO NOT SCALE

STEP 2: TRIM INTERSECTION EPS TO HEIGHT OF THE BOTTOM OF FRAME.

STEP 4: FIELD TRIM INCOMING EPS FORMER AS NEEDED.

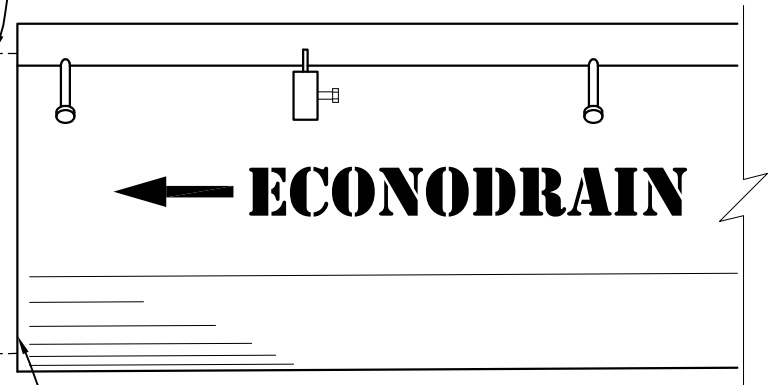

STEP 5: TAPE JOINT OF EPS FORMERS AS NEEDED.

NOTES:

- 1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURERS SPECIFICATIONS.
- 2. DO NOT SCALE DRAWINGS.

